Thinking of you

Electrolux

Oven

Electrolux. Thinking of you.

Share more of our thinking at www.electrolux.com

Contents

Safety information	2	Care and cleaning	14
Product description	4	What to do if	17
Daily use	5	Environment concerns	17
		Subject to change w	ithout notice



Safety information

Before the installation and use, read this manual carefully:

- For your personal safety and the safety of your property
- For the respect of the environment
- For the correct operation of the appliance. Always keep these instructions with the appliance also if you move or sell it.

The manufacturer is not responsible if incorrect installation or use results in damage.

Children and vulnerable people safety

- Do not let persons, children included, with reduced physical sensory, reduced mental functions or lack of experience and knowledge to use the appliance. They must have supervision or instruction for the operation of the appliance by a person who is responsible for their safety.
- Keep all packaging away from children.
 There is the risk of suffocation or physical injury.
- Keep children and small animals away from the appliance when the door is open or the appliance is in operation. There is the risk of injury or other permanent disability.
- If the appliance has Switch-on lock or Key lock function, use it. It prevents children and small animals from accidental use of the appliance.

General safety

- Do not change the specifications of this appliance. There is the risk of injury and damage to the appliance.
- Do not let the appliance stay unattended during operation.
- Switch off the appliance after each use.

Installation

- Only an approved electrician can install and connect the appliance. Contact an approved service centre. This is to prevent the risks of structural damage or physical injury.
- Make sure that the appliance is not damaged because of transport. Do not connect a damaged appliance. If necessary, contact the supplier.
- Remove all packaging, stickers and layers from the appliance before first use. Do not remove the rating plate. It can invalidate the guarantee.
- Fully obey the laws, ordinances, directives and standards in force in the country where you use the appliance (safety regulations, recycling regulations, electrical or gas safety rules etc.).
- Make sure that the appliance is disconnected from the power supply during the installation.
- Be careful when you move the appliance.
 The appliance is heavy. Always use safety
 gloves. Do not pull the appliance by the
 handle.
- The appliance must have the electrical installation which lets you disconnect the appliance from the mains at all poles with a contact opening width of minimum 3 mm.
- You must have correct isolation devices: line protecting cut-outs, fuses (screw type fuses removed from the holder), earth leakage trips and contactors.
- The shock protection parts must be fixed in such a way that they cannot be undone without tools.
- Some parts of the appliance carry current.
 Close the appliance with furniture and make sure that there are no free spaces. It

- prevents electrical shock because vou cannot accidentally touch dangerous parts.
- Before the installation, make sure that the kitchen cabinet has the recess dimensions applicable.
- Make sure that the appliance is installed below and adjacent safe structures.
- Keep the minimum distances to the other appliances and units.
- Install the appliance with its back and one side close to the higher appliance. The other side must be close to appliance with the same height.
- The appliance cannot be positioned on a base.
- Built in ovens and built in cooking surfaces are attached with special connection system. To prevent damage to the appliance, only use an appliance with the appliances from the same manufacturer.

Electrical connection

- The appliance must be earthed.
- Make sure that the electrical data on the rating plate agree with your domestic power supply.
- Information on the voltage is on the rating
- Always use a correctly installed shockproof socket.
- When you connect electrical appliances to mains sockets, do not let cables touch or come near the hot appliance door.
- Do not use multi-way plugs, connectors and extension cables. There is the risk of fire.
- Do not replace or change the mains cable. Contact the service centre.
- Make sure not to squash or cause damage to the mains plug (if applicable) and cable behind the appliance.
- Make sure that the mains connection is accessible after the installation.
- Do not pull the mains cable to disconnect the appliance. Always pull the mains plug - if applicable.

Use

• The appliance is only for domestic use. Do not use the appliance for commercial and industrial use.

- Only use the appliance for domestic cooking tasks. This is to prevent physical injury to persons or prevent damage to property.
- Do not use the appliance as a work surface or storage surface.
- Do not put flammable products or items that are wet with flammable products, and/or fusible objects (made of plastic or aluminium) in, near or on the appliance. There is the risk of explosion or fire.
- The interior of the appliance becomes hot during use. There is the risk of burns. Use gloves when you insert or remove the accessories or pots.
- Be careful when you remove or install the accessories to prevent damage to the oven enamel.
- Always stay away from the appliance when you open the door while the appliance is in operation. Hot steam can release. There is the risk of skin burns.
- To prevent damage or discoloration to the enamel:
 - do not put any objects directly on the appliance floor and do not cover it with aluminium foil:
 - do not put hot water directly into the appliance:
 - do not keep moist dishes and food in the appliance after you finish the cooking.
- Discoloration of the enamel has no effect on the performance of the appliance
- Do not use this appliance if it is in contact with water. Do not operate the appliance with wet hands.
- Do not apply pressure on the open door.
- Always close the appliance door when you cook, even while grilling.

Care and cleaning

- Before maintenance, switch off the appliance and disconnect the appliance from the power supply.
- Before maintenance, make sure that the appliance is cold. There is the risk of burns. There is the risk that the glass panels can break.
- Keep the appliance clean at all times. A build-up of fats or other foodstuff can result in a fire.
- Regular cleaning prevents the surface material from deteriorating

4 electrolux

- For your personal safety and the safety of your property, only clean the appliance with water and a soap. Do not use flammable products or products that can cause corrosion.
- Do not clean the appliance with steam cleaners, high-pressure cleaners, sharp objects, abrasive cleaning agents, abrasive sponges and stain removers
- If you use an oven spray, follow the instructions from the manufacturer. Do not spray anything on the fat filter (if applicable), the heating elements and the thermostat sensor.
- Do not clean the glass door with abrasive cleaning agents or metal scraper. Heat resistant surface of the inner glass can break and shatter.
- When the door glass panels are damaged they become weak and can break. You must replace them. Contact the service centre.
- Be careful when you remove the door from the appliance. The door is heavy!

Do not clean catalytic enamel (if applicable).

Oven lamp

 Disconnect the appliance from the power supply before the replacement of the oven lamp. There is the risk of electrical shock!


Service centre

- Only an approved engineer can repair or work on the appliance. Contact an approved service centre.
- · Use only original spare parts.

Disposal of the appliance

- To prevent the risk of physical injury or damage
 - Disconnect the appliance from the power supply.
 - Cut off the mains cable and discard it.
 - Discard the door catch. This prevents children or small animals from being closed inside of the appliance. There is the risk of suffocation

Product description

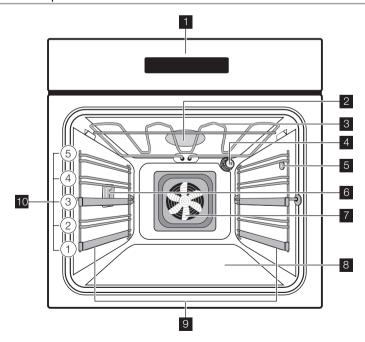

- 1 Electronic programmer
- 2 Smell filter

- 3 Heating element
- 4 Oven lamp

- 5 Meat probe socket
- 6 Side lamp
- 7 Fan
- 8 Bottom heat
- 9 Oven shelf runners, removable
- 10 Shelf positions

Oven accessories

Oven shelf

For cookware, cake tins, roasts.

- Flat baking tray For cakes and biscuits.
- Deep roasting pan To bake and roast or as pan to collect fat.
- Meat probe

To measure how far the meat is cooked.

Daily use



Warning! Refer to "Safety information" chapter.

Initial Cleaning

- Remove all parts from the appliance.
- Clean the appliance before first use.




Caution! Do not use abrasive cleaning agents! This can damage the surface. Refer to chapter "Care and Cleaning".

First Connection

When you connect the appliance to the mains or after the power cut you have to set the language, display contrast, display brightness and time of the day. Touch + or - to set the value. Touch **OK** to confirm.

Electronic programmer

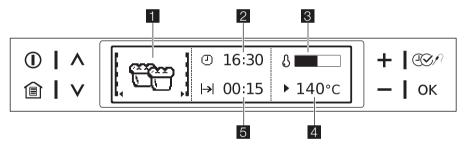

- 1 Menu option symbol (with oven shelf level)
- 2 Clock
- 3 Heat indicator

- 4 Temperature / weight
- 5 Time functions

Panel sensor fields overview

Sensor field	Function	Comment
①	To activate and deactivate the appliance.	
(B)	To show the main menu.	The set function deactivates (except for the countdown timer).

Sensor field	Function	Comment
^∨	To move down and up in the menu.	 When a function is on: Touch the sensor field one time: Open the higher menu (function remains on). After 5 seconds the appliance switches to the initial menu option Touch the sensor field two time: Change to the higher menu and move up and down (the function deactivates)
	To set the values (example: temperature, time, weight, degree to cook).	 To operate the value: Touch the sensor field one time: The symbol flashes Touch the sensor field two time: You can set the value
+,-		To set the values: To uch the sensor field one time: To set the value in slow steps Hold down the sensor field: To set the value in fast steps
		To set the display to zero, when you set a cook time or the time • Touch + and - at the same time.
(10)P?	To set the time functions, more functions and Meat probe.	
OK	To confirm.	

Touch the sensor fields to operate the appliance. Make sure, that you only touch one sensor field. If you apply your finger too flat, you could touch more sensor fields.

Display symbols

During appliance operation display shows various symbols.

2323			
	Symbol	Display (ex- amples)	Function
\Diamond	Minute Minder	4:30	The countdown timer is on.
4	Time	10:00	The display shows the time set.
→	Duration	1:00	Shows the time required for the cooking cycle.
	→ End Time	14:50	The display shows the time, when the cook time is completed.
7			The display shows the end time calculated when you inserted the meat probe.
$ \rightarrow$	Start	0:45	The display shows the time when the appliance starts to cook. (When you use End Time and Cook Time combined).
8	Temperature	1. 2.	 Indicates temperature level in the cavity. Display shows it also after you deactivate the appliance and the cavity is still warm. Rapid heat-up is active. It reduces heat up time.
ă	Weight	1,5 kg	The display shows that automatic weight system is active or weight can be changed.
n	Meatprobe	75°C	The meatprobe is installed.The Meatprobe Automatic is on.You can change the core temperature.

S	symbol	Display (ex- amples)	Function
	Heat+Hold	80°C	The display shows the function is active.
~~~~	Smell filter		The smell filter is on.

## The menus in overview

# Main menu

Sy mb ol	Menu item	Application
留	Assisted Cooking	Contains list of automatic cooking programmes.
	Heating Functions	Contains list of oven heating functions.
$\Diamond$	My Programmes	Contains list of favourite cooking programmes created by user.
$\otimes$	Basic Settings	You can use it to set other oven settings.

#### Submenus

# **Submenus for: Assisted Cooking**

Sym- bol	Submenu
$\bigcirc$	Pork/Veal
9	Beef/Game/Lamb
2	Poultry
	Fish
	Cake
	Pizza/Pie/Bread
$\ominus$	Casseroles/Gratins
	Convenience
	Specials

# **Submenus for: Heating Functions**

	Oven function	Application
(%)	Fan Cooking	For baking on up to three oven levels at the same time. Set the oven temperatures 20-40 °C lower than when using Conventional.
_	Conventional Cooking	For baking and roasting on one oven level
( <u>~)</u>	Pizza Setting	For baking on one oven level dishes that require more intensive browning and a crispy base. Set the oven temperatures 20-40 °C lower than when using conventional.

	Oven function	<b>A</b> pplication
****	Turbo Grill	For roasting larger joints of meat or poultry on one level. The function is also suitable for gratinating and browning.
****	Economy Grill	For grilling flat foodstuffs placed in the middle of the grill and for toasting.
<del>***</del>	Dual Grill	For grilling flat foodstuffs in large quantities and for toasting.
_	Bottom Heat	For baking cakes with crispy or crusty bases.
(%)	Slow Cook	For preparing especially tender, succulent roasts.

# Submenus for: My Programmes

Sym- bol	Submenu
-	1 - My Programmes
-	2- My Programmes
-	
-	Edit Programme Name

## **Submenus for: Basic Settings**

Subii	ubmenus for: Basic Settings		
Sy mb ol	Submenu	Description	
<b>(</b>	Set Time of Day	Sets the current time on the clock.	
①	Time Indication	When ON, the displays shows the current time when you deactivate the appliance.	
<b>⊘</b> →	Set+Go	When ON you can choose Set+Go function in the Select Options window.	
	Heat+Hold	When ON you can choose Heat+Hold function in the Select Options window.	
<b>(</b>	Time Extension	Activates and deactivates the Time Extension function.	
	Display Contrast	Adjusts display contrast by degrees.	
X	Display Brightness	Adjusts display brightness by degrees.	
₽	Set Language	Sets the language for the display.	
إ≒	Buzzer Volume	Adjusts the volume of the touch-tones and signals by degrees.	
	Key Tones	Activates and deactivates the touch fields tone.	
33	Alarm/Error Tones	Activates and deactivates the alarm tones.	
	Smell Filter	Activates and deactivates the smell filter.	
i	Service	Shows the software version and configuration.	
<u>&amp;</u>	Factory Settings	Reset all settings to factory settings (including My Programmes ).	

Touch ① to activate or deactivate the appliance.

#### Operation of the menus:

- 1. Activate the appliance.
- Touch 
   ✓ or 
   ✓ to select the menu option.
- 3. Touch **OK** to move to submenu or accept setting.

At every point you can get back to the main menu with  $\widehat{\blacksquare}$  .

## Starting a heating function

- Select Heating Functions menu. Touch OK to confirm.
- 2. Select heating function. Touch **OK** to confirm.
- Set the temperature. Touch **OK** to confirm.

## Switching off the heating function

Touch (a) to cancel the procedure. The display shows the main menu.

## Setting the oven temperature

Touch + or - to set the temperature. The appliance starts to heat.

When the appliance operates at the set temperature, an acoustic signal sounds.


## Showing the oven temperature

Touch + or - at the same time.


The display shows the oven temperature.

## **Inserting the Oven Accessories**

Put the flat baking tray or the deep roasting pan on the telescopic runners. Hook the holes on the edges onto the retaining pins on the telescopic runners.

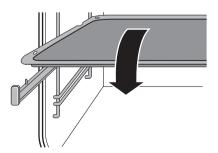


Put the oven shelf on the telescopic runners so that the feet point downwards.

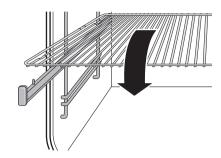

The high rim around the oven shelf is an additional device to prevent cookware from slipping.

# Inserting the oven shelf and deep roasting pan together

Put the oven shelf on the deep roasting pan. Put the oven shelf and the deep roasting pan on the telescopic runners. Hook the holes on the edges onto the retaining pins on the telescopic runners.

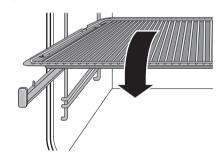

## **Automatic programmes**

These 3 automatic programmes give optimum settings for each type of meat or other recipes:

- Meat programmes with Weight Automatic (Assisted Cooking menu)
- Meat programmes with Meatprobe Automatic (Assisted Cooking menu)
- Recipe Automatic (Assisted Cooking menu)

# Assisted Cooking with Weight Automatic

This function automatically calculates the roasting time. To use the function, It is necessary to input the food weight.

#### Activating the function:

- 1. Activate the appliance.
- Select Assisted Cooking . Touch **OK** to confirm.
- Select the category and dish. Touch **OK** to confirm.
- 4. Select the Weight Automatic . Touch **OK** to confirm.
- 5. Touch + or to set the food weight. Touch **OK** to confirm.

The automatic program starts. You can change the weight at any time. Touch + or - to change the weight. When time ends, an acoustic signal sounds. Touch a sensor field to deactivate the signal.

(i) With poultry programmes turn over the food after 30 minutes. The display shows a reminder.

# Assisted Cooking with Recipe Automatic

This appliance has a set of recipes you can use. Recipes are fixed and you cannot change them.

#### Activating the function:

- 1. Activate the appliance.
- Select Assisted Cooking menu. Touch **OK** to confirm.
- Select the category and dish. Touch **OK** to confirm.
- 4. Select the Recipe Automatic . Touch **OK** to confirm.
- When you set the option Manual, the display shows automatic settings but you can change them.

# Assisted Cooking with Meatprobe Automatic

- 1. Activate the appliance.
- Touch \( \sigma \) or \( \sigma \) to set the function Assisted Cooking , the necessary category and the dish.
- 3. Touch  $\bigwedge$  or  $\bigvee$  to set the function Meatprobe Automatic .
- 4. Touch **OK** to confirm.

  The display shows " Meatprobe ".
- 5. Install the meat probe.

- When the programme ends, an acoustic signal sounds.
- Use a sensor field to deactivate the acoustic signal.
- 6. Remove the meat probe.

#### Meatprobe

Meat probe measures the core temperature of the meat. When the meat reaches set temperature the oven deactivates automatically.

### There are two temperatures to be set

- The oven temperature
- The core temperature

**Important!** Only use the meat probe supplied or genuine replacement parts.

- 1. Activate the appliance.
- 2. Put the tip of the meat probe into the centre of the meat.
- Put the plug of the meat probe into the socket on the side wall of the oven.
   The display shows Meatprobe .
- 4. Touch + or in less than 5 seconds to set the core temperature.
- Set the oven function and, if necessary, the oven temperature.
   The appliance calculates the provisional end time for the set temperature again and again. The display constantly shows the new provisional end time.
- The meatprobe must stay in the meat and in the meatprobe socket during the cooking process.
- When the meat reaches set core temperature, an acoustic signal sounds. The appliance deactivates automatically.
  Use a sensor field to stop the signal.
- Remove the meatprobe plug from the socket and remove the meat from the oven.
- **Warning!** The meat probe is hot! There is the risk of burns! Be careful when you remove the tip and plug of the meat probe.
- 8. Switch off the appliance.
- For meat programmes with the meatprobe , refer to automatic programmes .

# My Programmes menu

You can store your favourite settings like duration, temperature or oven function. They

are available in My Programmes menu. You can store 20 programmes.

## Storing a programme

- 1. Activate the appliance.
- 2. Select the oven function or Assisted Cooking function.
- Touch (T) again and again until the display shows " SAVE ". Touch OK to confirm.
- 4. The display shows the first free memory position.

Touch **OK** to confirm.

- The first letter flashes.
   Touch + or to change the letter. Touch
   OK to confirm.

The letter flashes.

7. Repeat steps 5 and 6 again to write name of the program.

Touch and hold **OK** to save.

- You can overwrite a memory position in storage. (Refer to the section "Storing a programme". At step 4 touch  $\checkmark$  or  $\land$  to choose memory position you want to overwrite.)
- You can change the name of a Programme in the menu "Edit Programme Name".

## Activating the programme

- 1. Activate the appliance.
- 2. Select My Programmes menu. Touch **OK** to confirm.
- 3. Select your favourite programme name. Touch **OK** to confirm.

### **Clock functions**

Symbol	Function	Description
$\triangle$	Minute Minder	To set a countdown (max 2 hours 30 minutes). This function has no effect on the operation of the appliance.
$ \rightarrow $	Duration	To set how long the appliance has to be in operation (max. 23 h 59 min).
$\rightarrow$	End Time	To set the switch-off time for an oven function (max. 23 h 59 min).

You can use Duration and End Time at the same time, if the appliance is to activated and deactivated automatically later.

If you set the time for a clock function, the time starts to count down after 5 seconds.

If you use the clock functions Duration and End Time, the appliance deactivates the heating elements after 90 % of the set time. The appliance uses the residual heat to continue the cooking process until the time ends (3-20 minutes).

## Setting the clock functions

- Touch (T) again and again until the display shows the necessary clock function and the related symbol.
- 2. Touch + or to set the necessary time. Touch **OK** to confirm.

After 90 % of the set time, an acoustic signal sounds. The appliance deactivates. The display shows a message.

- 3. Touch a sensor field to stop the signals.
- i With Minute Minder you must activate the appliance to set the clock function.
- With Duration and End Time the appliance deactivates automatically.
- with Duration and End Time you must set the heating function and the temperature first. Then you can set the clock function.
- When you use Food Probe, Duration and End Time do not work.

#### Time Extension

The Time Extension makes the oven function continue after the set time ends.

- Applicable for all oven functions with Duration or Weight Automatic
- Not applicable for oven functions with Meatprobe.

## Activating the function:

- 1. When the cooking time ends, an acoustic signal sounds. Touch any sensor field.
- 2. The display shows the message for Time Extension for five minutes.
- 3. Touch ( to activate.
- Set Time Extension period. Touch **OK** to confirm.

#### SET+GO

SET+GO function lets you set an oven function (or programme) and use it later with one touch of the sensor field.

#### Activating the function:

- 1. Activate the appliance.
- 2. Set the heating function.
- 3. Touch ( again and again until the display shows Duration .
- 4. Set the time.
- 5. Touch ( again and again until the display shows SET+GO.
- 6. Touch **OK** to confirm.

To start SET+GO touch any sensor field (except ①). The set oven function starts. When the oven function ends, an acoustic signal sounds.

- When the oven function operates, the function Key Lock is on.
- You can activate and deactivate the SET +GO function in the Basic Settings menu.

#### Heat+Hold

The Heat+Hold function keeps prepared food warm at 80° for 30 minutes. It activates after the baking or roasting procedure ends.

# i Conditions for the function:

- The set temperature is more than 80°C.
- The function duration is set.

### Activating the function

- 1. Activate the appliance.
- 2. Select the oven function.
- 3. Set the temperature above 80°C.
- Touch (T) again and again until the display shows Heat+Hold. Touch OK to confirm.

When the function ends, an acoustic signal sounds.

The Heat+Hold function operates for 30 minutes.

The Heat+Hold function stays on if you change the oven functions.

You can activate or deactivate the function in Basic Settings menu.

#### **Smell Filter**

The Smell Filter minimizes the smells of cooking. You can activate or deactivate it in the Basic Settings menu.

Once you activate the Smell Filter, it switches on automatically when you start a baking or roasting programme (except for Specials). Energy consumption increases when the Smell Filter is activated.

If you deactivate the Smell Filter, it switches on automatically after 100 hours of work, in order to clean itself.

### **Key Lock**

The Key Lock prevents an accidental change of the oven function .

## Activating the Key Lock

- 1. Activate the appliance.
- 2. Set the oven function.
- 3. Touch ( again and again until the display shows Key Lock
- 4. Touch **OK** to confirm. The Key Lock is active.

# Deactivating the Key Lock

- 1. Touch (-(√)/?.
- 2. Touch **OK** to confirm. The Key Lock is not active.

i If you deactivate the appliance, the Key Lock deactivates.

#### **Child Lock**

The Child Lock prevents an accidental operation of the appliance.

## Activating the Child Lock

- Activate the appliance.
   Do not set an oven function.
- Touch and at the same time at the same time until the display shows a message.

## Deactivating the Child Lock

1. Do the above steps again.

#### Automatic switch-off

The appliance deactivates after some time:

- if you do not deactivate the appliance;
- if you do not change the oven temperature.

Oven temperature	Switch-off time
30 °C - 120 °C	12 h
120 °C - 200 °C	8.5 h
200 °C - 245 °C	5.5 h
250 °C -maximum °C	3.0 h

To operate the appliance after an automatic switch-off, first deactivate the appliance fully.

## Heat-up indicator

When you activate an oven function, the bar on the display comes on. The bar shows that the temperature increases.

## Rapid heat-up indicator

For some oven functions the rapid heat-up function decreases the heat-up time automatically. The bar of the indicator moves from right to left until the oven reaches the target temperature.

#### Residual heat indicator

When you deactivate the appliance, the display shows the residual heat. You can use the heat to keep the food warm.

## Cooling fan

When the appliance operates, the cooling fan switches on automatically to keep the surfaces of the appliance cool. If you switch off the appliance, the cooling fan continues to operate until the appliance cools down.

# Safety thermostat


To prevent dangerous overheating (due to incorrect use of the appliance or defective components), the oven has a safety thermostat, which interrupts the power supply. The oven switches back on again automatically, when the temperature drops.

#### Mechanical door lock


When the appliance is delivered, the door lock is deactivated.

# Activating and Deactivating the door lock


Take hold of the door trim (B) on the upper edge of the door at both sides and press inwards to release the clip seal.
 Then remove the door trim by pulling it upwards.

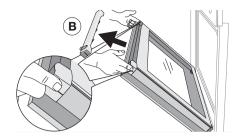


- 2. For activating, step a. For Deactivating step b.
  - a) Activate Doorlock: Remove lever (1), move it 4 mm to the left (2) and reinsert (3).

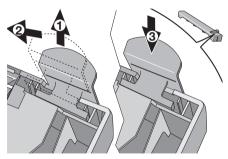


b) **Deactivate** Doorlock:
Demount lever: Remove lever (1).

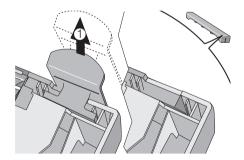


Remove trim (2) from the under side of the door trim (B) and push in (3).

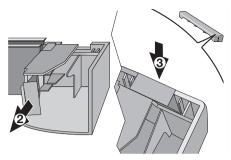

 Take hold of the door trim (B) at each side, position it on the inside edge of the door and plug the door trim (B) into the upper edge of the door.

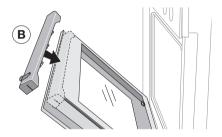


**Important!** There is a guide bar (C) on the open side of the door trim (B). This must be pushed between the outer door panel and the guide corner (D). The clip seal (E) must be snapped in.

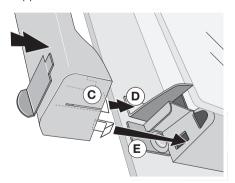

#### To open the oven door.

- 1. Keep lever pressed.
- 2. Open the door.

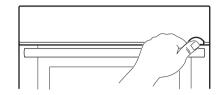

#### To close the oven door


Close door without pressing the lever.

#### To deactivate door lock

To deactivate the door lock, the lever is moved to the right again. Proceed as described above.

**Important!** Switching off the appliance does not remove the mechanical door lock.

# Care and cleaning

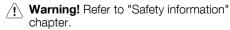


- Clean the front of the appliance with a soft cloth with warm water and cleaning agent.
- To clean metal surfaces use a usual cleaning agent
- Clean the oven interior after each use.
   Thus you can remove dirt more easily and it does not burn on.

- Clean stubborn dirt with a special oven cleaner
- Clean all oven accessories (with a soft cloth with warm water and cleaning agent) after each use and let them dry.
- If you have nonstick accessories, do not clean them using an aggressive agents, sharp edged objects or dishwasher. It can destroy nonstick coating!


## **Shelf Support Rails**

## Removing the shelf support rails

1. Pull the front of the shelf support rail away from the side wall.

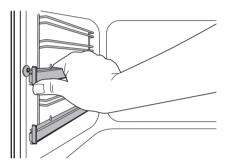

2. Pull the rear shelf support rail away from the side wall and remove it.

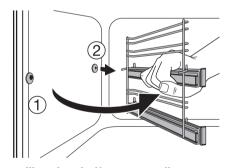

### Installing the shelf support rails

Install the shelf support rails in opposite seauence.

i Important! The rounded ends of the shelf support rails must point to the front!


## Replacing the oven light bulb/cleaning the glass cover

/ Warning! Be careful! There is the risk of electrical shock!

- 1. Turn the glass cover anti-clockwise to remove it
- 2. Clean the glass cover.
- 3. Replace the oven light bulb with applicable 300°C heat-resistant oven light bulb. New oven light bulb must have the same parameters as your previous one.
- 4. Install the glass cover.

## Replacing the oven lamp (left side of the appliance) Cleaning the glass cover

- 1. Remove the left shelf support rail.
- 2. Use a cross-tip screwdriver to remove the glass cover.

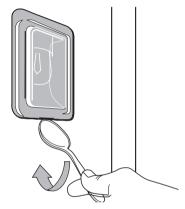


- 3. Use a narrow, blunt object (e.g. a teaspoon) to take off the glass cover and clean it.
- 4. If necessary: Replace the oven lamp. Technical data: 300°C, heat resistant.
- 5. Install the glass cover.
- 6. Install the left shelf support rail.

#### Oven Ceiling

You can fold down the heating element on the oven ceiling to clean the oven ceiling easilv.

#### Folding down the heating element

1. Remove the shelf support rails.

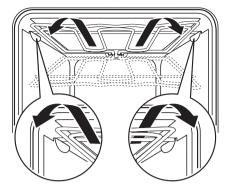

- 2. Hold the heating element with the two hands at the front
- 3. Pull it forwards against the spring pressure and out along the support on both sides.
- 4. The heating element folds down. The oven ceiling is ready to clean.

#### Installing the heating element

1. Install the heating element in opposite seauence.

**Important!** Install the heating element correctly on the two sides above the support on the inner wall of the oven.

2. Insert shelf support rails.


## Oven door and glass panels

To clean the oven door remove it.


( Caution! Be careful when you remove the door from the appliance. The door is heavy!

## Removing the oven door

- 1. Open the oven door as far as it goes.
- 2. Lift up clamping levers (A) on the two door hinges fully.

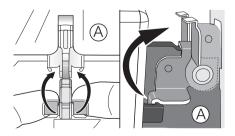


3. Close the oven door until the first position (angle approx. 45°).

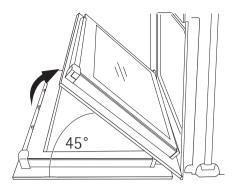

- 4. Hold of the oven door with one hand on each side and pull it away from the oven at an upwards angle.
- Put the oven door with the outer side down on a soft and level surface to prevent scratches.
- 5. Now you can remove the inner glass panels and clean them. To install the door follow the procedure in reverse.
- Caution! Be careful with the glass, it can break.
- The oven door has 2, 3 or 4 panels of glass (depends on the model)
- Caution! Rough handling, especially around the edges of the front panel, can cause the glass to break.

## Removing and cleaning the door glasses

1. Hold the door trim (B) on the top edge of the door at the two sides and push inwards to release the clip seal.

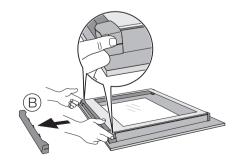

2. Pull the door trim to the front to remove



- Hold the door glass panels on their top edge one by one and pull them upwards out of the guide
- Clean the door glass panels.
   To install panels follow the procedure in reverse. Insert the smaller panel first, then the larger.

## What to do if...

**Warning!** Refer to "Safety information" chapter.

Problem	Possible cause	Remedy
The oven does not heat up	The oven is switched off	Activate the oven
	The clock is not set	Set the clock
	The necessary settings are not set	Check the settings
	The switch-on lock is activated	Refer to "Switching off the switch- on lock"
	The fuse in the fuse box is released	Check the fuse If the fuse is released more than one time, contact a qualified electrician
The display shows F11	The meat probe plug is not correctly installed into the meat probe socket	Install the meat probe plug as far as possible
The oven lamp does not operate	The oven lamp is defective	Refer to "Replace the oven lamp"

If you cannot find a solution to the problem yourself, contact your dealer or the service centre.

The necessary data for the service centre is on the rating plate. The rating plate is on the front frame of the oven cavity.

we recommend that you write the data here.	
Model (MOD.)	
Product number (PNC)	
Serial number (S.N.)	

# Environment concerns

The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate

waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product.



# Packaging material

The packaging material is environmentally-friendly and recyclable. Plastic parts are marked with international abbrevia-

tions such as PE, PS, etc. Dispose of the packaging material in the containers provided for this purpose at your local waste management facility.